

Equipment: Carpet Cleaning Machines > Vacuum Cleaners > HEPA Concrete Dust Slurry Hazmat Vacuums >



Model Number: 20180508

Clean Storm CRB Escalator Cleaning Package 20180508

Manufacturer: Clean Storm

Clean Storm Escalator Cleaning Package 20180508

Includes one each of the items below

Clean Storm CRB20 Wide Pre-Scrubber and Dry Cleaning Machine
67-065

Includes machine, blue brushes and dirt catch trays, and transportation dolly

CRB Industries TM5 Tile Cleaning Hard Green Brush CRB 20 inch
B850-DS Each 67-063

2 units included in the package

CRB Industries TM5 B854-DS Hard Brush 18in for CRB 20in Floor
Scrubber Machine Yellow Brush Sold Each

2 units shipped in this package

Equipment: [Carpet Cleaning Machines](#) > [Vacuum Cleaners](#) > [HEPA Concrete Dust Slurry Hazmat Vacuums](#) >

Century Wire and Cable Pro Lock Extension Power Cord 14-3 X 50 ft
with 5-15P and 5-15R Ends D14414050BL

Package include one power cord
Watch Video on Link!

Shazaam SBM230 Kryptonium 1 Gallon High ph Degreaser Degrease
All Surface Types (Purple)

Super concentrated.

Solo 456HD Chemical Resistant 2 Gal Plastic Sprayer Pump Up with
Viton Seals

For Escalator cleaning, set the escalator to be moving away from you.
Use the snap in renovator trays during use. These trays will catch all the dirt and liquid.
Use the stiffest brush that still allows you to reach the bottom of the tread deck.
Turn on the CRB (counter rotating brush) on the non moving floor and then move forward until it starts to ride on and over the moving escalator tread.
Hold the CRB machine firmly.
Hold the CRB machine over the moving treads as the pull away from you.
The operator is NOT standing on the escalator, rather on the stationary floor.
Just leave in place until you do not notice any more dirt removal.
You will usually have to do this for the left side of the escalator and then the right side of the escalator.
The brush width is 15" and many escalators are 30 to 36" wide you might even have to perform the cleaning process 2 or 3 times.
Once you have removed as much dirt dry, then start to spray in front of the CRB to wet the each tread.
Each tread will pass under the spray and then under the CRB. You will have to continue to spray so that all the treads that pass under the CRB have been cleaned wet. Continue to run the crb until the treads have dried up again. Respray and adjust quantity of liquid to match soil level if additional cleaning is needed.
Additional chemicals may also be required based on stain and soil type.
Example to remove blood, body fluids, paint, ink, etc would be completely different products.

Commercial cleaning system that gives you 7 machines in 1.

1. Ultimate Pre-scrubbing agitator for before hot water extraction.
2. Adsorbent powder and encapsulation carpet dry cleaning machine.
3. Hard floor cleaning machine.
4. Pile lifting machine.
5. Area rug and wool cleaning machine.
6. Ultimate Hair removal machine.
7. Escalator Cleaning machine.

Can be used on dry, or damp floors.

Change between brush types in under one minute. From soft area rug brushes, carpet cleaning brushes, tile cleaning brushes and escalator cleaning

Ultra fast and super easy to use.

Counter rotation of brushes makes the machine glide over the carpet like a hockey puck on ice!

Built for the dry cleaning industry but quickly taking over as the best prescrubbing machine on the market today. Use before you rinse with your portable or

truckmounted hot water extraction machine.
One machine can drive and clean the carpet, tile and delicate wool rugs.

2 year limited warranty on machine
5 year limited warranty on motor
Motor: 750W
Electricity: 120V
Brush rotation: 380 RPM
Sound level: 57.8 dB
Dirty water capacity: 0.9 gal
Cleaning capacity (carpet/hard floor encapsulation cleaning): 7500 square feet/hour/ Agitation for prescrubbing 10,000 sq ft hr.
Includes White default Carpet Cleaning Brush. Photo shown with optional Tile and grout brushes
Machines have splash proof electronics and can be used in rug pits, carpets and hard floor surfaces.

- Cylindrical counter-rotating brushes turning at 380 RPM dislodge embedded soils without damaging carpet fibers
- Renovator system captures dry particulate matter and debris and lifts pile while agitating.
- Solution dries in minutes
- Multi-purpose: use to agitate prespray before hot water extraction; change brushes for wood floors and other hard surfaces
- 20-inch cleaning path delivers up to 5000 square feet per hour of cleaning.

Connect two units for even faster cleaning!

- Great for residential and commercial carpet

35" Long lift off handle
Machine is 50" with the handle parked upright inside of the transport tray.

Includes snap in stainless steel dust and splash covers and renovators for dirt and adsorbent power collection.

Includes: Transport and dolly tray with anti brush crushing technology.

Includes: Snap in Stainless steel splash and dust cover with transport wheels.

Includes: Snap in Stainless steel renovator trays with view windows.

Assembled in the USA from globally sourced products.

Question: Are the soft white brushes that are supplied with the machine OK to use on wool, jute, sisal, and silk rugs?

Answer: The factory performed a change on brushes. The original design was to include a white soft brush for home carpet and natural fiber area rugs. These have been changed out, by default now you receive blue brushes that are both home wall to wall carpet and will also clean commercial carpeting. The white brushes (now optional) on the TM4 and TM5 do just fine on natural fibers, however, I do try brushes on any small area of the carpet or rug prior to performing the actual cleaning job.

Compare to current or past OEM Associations:

Versaclean 67-065 CRB 1580

Brush N Clean TM5-C

Clean Storm CRB20

Tandem Bar to double you speed.

Compare with other CBR machines [HERE](#)

Preventive Maintenance on CRB Machines

- Between each job, remove the brushes and wipe out the crud under the brush cover and by the bearings. (Use box rags, thick paper towel)
- At the end of the day after all jobs, use a cleaner such as Mr. Clean, Windex or a possible disinfectant with a scrub brush and wipe down with box rags.
- Make sure the bearings on the non-gear side spin freely, the moment they begin to not spin freely; it can torque the gear side and cause the gears to break. You will need to replace the non-gear side bearings as soon as they stop spinning freely. Important to check this on a weekly basis.
- Cleaning of Brushes: Take a 5-gallon bucket full of hot water and place the brushes in it. It will normally turn extremely black. Empty out the 5-gallon bucket and repeat. For extreme rat nasty with some brushes, you may need to repeat this process 6-7 times. The avg. time it takes per bucket full of hot water is 45 mins. During the final soak pour a few ounces of disinfectant and let it sit for 30-60 mins. Remove from bucket, set in front of fan and let dry.
- Remember the brushes get full of crud, dirt and debris and that overtime you

don't get as good as a clean. As the brush spins, all the crud collects on the black tube and it collects on the bristles from the inside moving out. However, if you constantly clean the brushes at the end of the day, they stay almost brand new for an incredibly long period of time.

Note: It can take up to 2 days for the dirtiest of brushes as you repeat the bucket of hot water process 6-7 times. It is recommend you do the process as much as needed until the water does not change colors. Also, if you do not properly clean after every job, the crud builds up and the gears work harder since the brush has to fight against the built up crud and this can cause the gears to break.

- Brush Rotation: Do not rotate the brushes from front to back. Since the brushes are soaked in hot water, it takes the memory out of that brush. However, if you use the machine for a long period of time, you will need to flip the brush but not front to back, only the other way around. It is important to remember that the brushes have a natural curve to the bristles tips and the bristles form "a memory" after constant use. You will need to rotate the brushes so the memory goes the opposite direction and begins to clean better.

Note: In order to tell when this happens, pay close attention to the cleaning results. If the results become mediocre, then flip the brushes.

- Insert some grease between the bearing and the cover and the bearing shaft entrance every month.

- Every 3 months, remove the gear cover, clean the gears and re-grease with white lithium grease.

- Make it a habit to remove the bearing cover every month to clean it up well with W-40 and make sure to dry it with compressed air and fit the cover together again.

Equipment: [Carpet Cleaning Machines](#) > [Vacuum Cleaners](#) > [HEPA Concrete Dust Slurry Hazmat Vacuums](#) >

Compare Carpet Cleaning Counter Rotation Brush CRB Agitator Scrubbers
Encap Comparison

Availability: This product was added to our catalog on Tuesday 08 May, 2018